

ATIVA
(rev) 11-2014

N U C R A F T

Installation Instructions

Before Beginning Installation

- Read through the entire instruction thoroughly
- A minimum of 2 people are required for this assembly
- These instructions reflect typical assemblies; They may not match your specific configuration

Required Tools & Hardware

- Drill Driver
- #2- #3 Phillips Bit
- 1/2" Nut Driver
- Laser Level

1



2



3




4




5



Ativa with Door Access

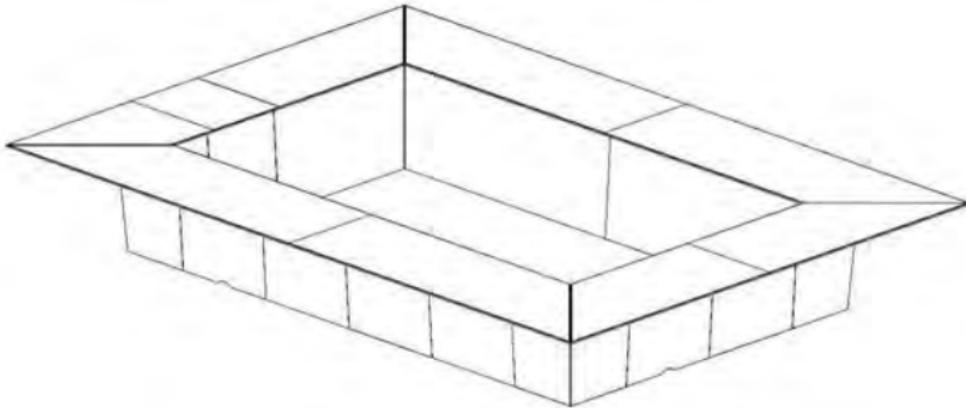


Exploded View

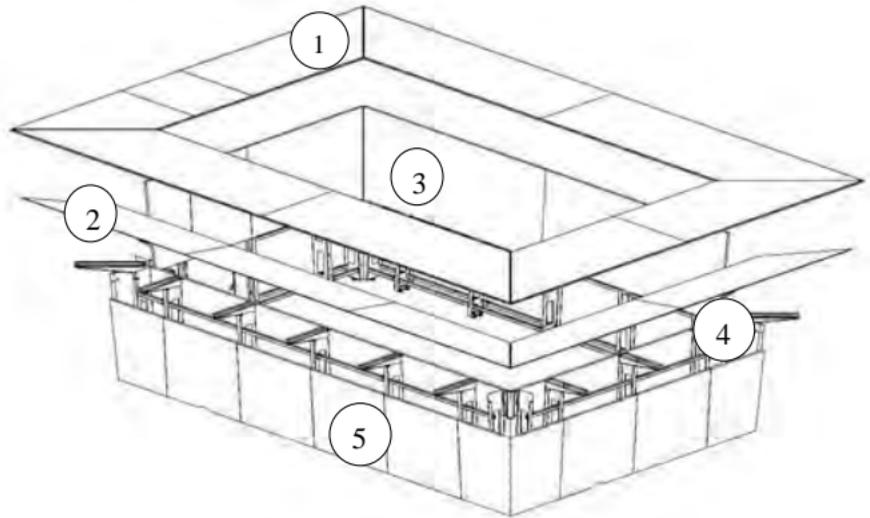


1. Work Surface
2. Shroud
3. Modesty Panel
4. Support Frame
5. Access Panels

Ativa U-Shape

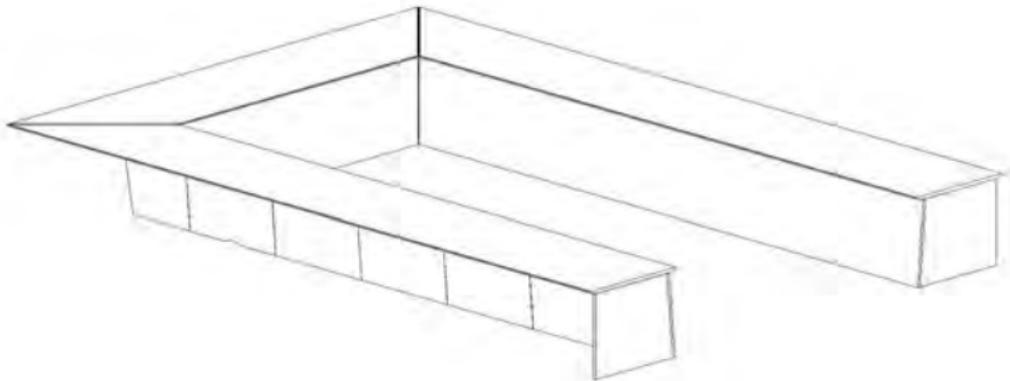

Exploded View

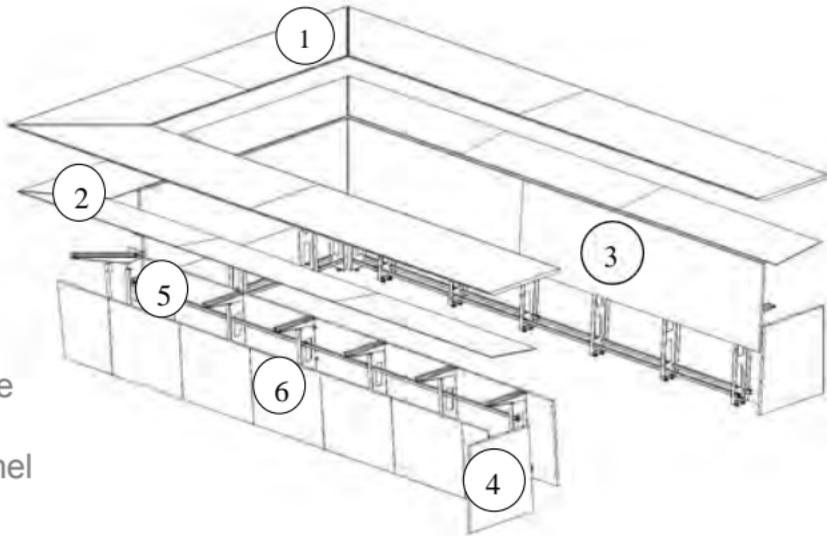

1. Work Surface
2. Shroud
3. Modesty Panel
4. End Panel
5. Support Frame
6. Access Panel

Step 1

Layout and Installation of Support Frame

- Arrange Support Frame assemblies in order where final position of table will be.
*Panels are labeled to ensure proper alignment.

*Note: This is where the table should be leveled and squared to the room.


It is critical to ensure that the base structure is accurately leveled.



Step 2

Connecting Support Frame Panels

- Attach support frame panels together with cams using a screwdriver. HW#1
- Align corners to trim piece and fasten using provided screw. HW#4
- Tighten the bolts on the frame once all panels are connected.

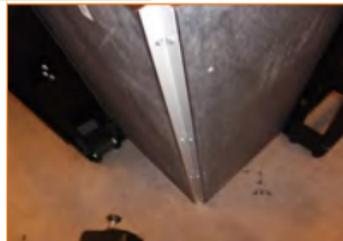

Step 3

Installing Tops

*Do not install corner frames until top has been installed and tight jointed together.


- Arrange tops over the base frames.
- Tops can be aligned referencing the trace marks on the underside to the frame gussets.
- Once all tops are aligned and tight jointed together(HW#6), fasten all tops to base frame.
HW#5



Step 4

Installing Corner Supports

- Corner supports may now be attached to the base.
- Align the corner and fasten to modesty panels using provided hardware. HW#3
- Attach connecting rods and tighten the ½" bolts once in place.

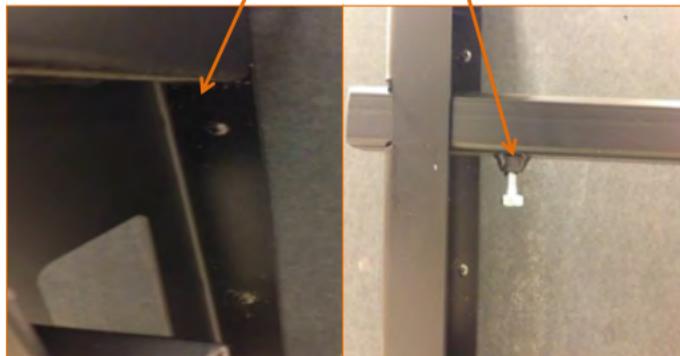

Step 5

Installing Wiring

- Once all tops and base frames are set, feed electrical through the base frames. Fig.10

*Note: This can be done at a later time when additional wiring is ran.



Step 6

Installing Access Panels

- Access panels may now be attached to the frame.
- Panels are labeled on the back side in a numerical order to ensure proper alignment.
- Panels attach with pre installed “Z” hooks that hang on the frame.



Step 7

Installing Access Door (4-sided tables only)

- Access door can be installed once tops are in place. *Note: Tops may need minor adjustments for door to fit properly.
- Top door is fastened with the provided hinges. Fig.13
- Attach the piston hinge to the top door. HW#3 Fig.14
- Bottom doors snap onto the hinge plates.



Step 8

Installing Shrouds

- Shrouds can now be installed on the table.
- Shrouds are labeled in a numerical order to ensure proper alignment.
- Shrouds ride in the channel on the under side of the work surface and base frame assembly.
- Where two shrouds meet, use clear trim piece to join together.

